

REPAIR PARTS LIST

Key No.	Part No.	GT-10-RV OR GT-10-LV	Key No.	Part No.	GT-10 DESCRIPTION
A	X450057	Cabinet Front Ass'y.	A	X450057	Cabinet Front Ass'y.
B	X450171	Burner Access Door Ass'y.	B	X450171	Burner Access Door Ass'y.
C	X450232	Comb. Chamber Ass'y.	C	X450232	Comb. Chamber Ass'y.
D	X450048	Heat Shield Inner Ass'y.	D	X450048	Heat Shield Inner Ass'y.
E	X450049	Rough-In Box Ass'y.	E	X450049	Rough-In Box Ass'y.
F	X450067	Turn Box Ass'y.	F	X450051	Vent Box Ass'y.
G	X450051	Vent Box Ass'y.	G	030409	Vent Grill
H	030409	Vent Grill	H	450212	Vent Plate
I	450212	Vent Plate	I	160674	Thermopile
J	160674	Thermopile MH#Q313A1014B (W)	I	160673	Thermocouple
J	160673	Thermocouple MH#Q309A2549B (A)	J	160666	Gas Valve
K	160666	Gas Valve MH-VS8310B1002 (Wall)	J	160665	Gas Valve MH-V5500B1029B (Automatic)
K	160665	Gas Valve MH-V5500B1029B (Automatic)	K	170407	Manifold Pipe
L	170407	Manifold Pipe	L	160691	Pilot MH-1 (W)
M	160691	Pilot MH-1 (W)		160690	Pilot MH-1 (A)
	160690	Pilot MH-1 (A)	M	010562	Main Burner (Cast Iron)
N	010562	Main Burner (Cast Iron)	N	120741	Air Adjustment Bolt
O	X290110	Lighter Cap (Solid)	O	X290110	Lighter Cap (Solid)
O	X290101	Lighter Cap (Mica)	O	X290101	Lighter Cap (Mica)
P	120741	Air Adjustment Bolt			

REPAIR PARTS LIST BS Blower Assembly

REPAIR PARTS LIST BD Blower Assembly

Key No.	Part No.	DESCRIPTION	Key No.	Part No.	DESCRIPTION
A	X450035	Blower Housing Ass'y.	A	X450035	Blower Housing Ass'y.
B	230424	Motor	B	230424	Motor
C	350073	Blower Wheel	C	350073	Blower Wheel
D	230398	Fan Switch	D	230398	Fan Switch
			E	230100	Transformer
			F	230399	Toggle Switch