

INSTALLATION OF MODELS GT-10RV, GT-10LV

- A. Cutting the Opening
Cut the opening as shown in (Fig. 4).
- B. Install the heater into the opening as described on page 3—Installing the Heater.

INSTALLATION OF VENT ASSEMBLY

Follow installation instructions on page 4—Installation of Vent Assembly, paragraphs A, B, and C.

